

Installation Instructions 700DNC40-24-XG 4kW DC/DC Converter

DC INPUT: 400-850Vdc

DC OUTPUT: 22-32Vdc/125-143A; 4kW (set to 28Vdc)

CAN BUS: For details regarding CAN communication please refer to COMMUNICATION MANUAL, document no.

BCA.00155

- CAUTIONS & NOTES -

CAUTION:

These component level power supplies are intended exclusively for installation within other equipment by an industrial assembly operation or by professional installers. These are Class I power supplies; the unit must be properly connected to earth ground in end use. Component power supplies are to be installed in end-use equipment according to the requirements of the safety standard used for that equipment.

PROTECTIVE EARTHING: The Power Supply must be properly grounded to main protective earth termination in end use.

ENVIRONMENTAL CONDITIONS:

TRANSPORTATION & STORAGE:

Ambient Temperature Range: -40°C to +85°C Relative Humidity Range: 5% to 95% at 25°C non-Condensing

Altitude: -300m to 12 000m above sea level

OPERATION:

Coolant Temperature Range: -40°C to +70°C (at 100% load)
Relative Humidity Range: 10% to 90% at 25°C non-Condensing
Altitude: -150m to 3 000m above sea level


NUCLEAR AND MEDICAL APPLICATIONS: Bel Fuse products are not designed, intended for use in, or authorized for use as critical components in life support systems, equipment used in hazardous environments, or nuclear control systems without the express written consent of the respective divisional president of Bel Fuse.


TECHNICAL REVISIONS: The appearance of products, including safety agency certifications pictured on labels, may change depending on the date manufactured. Specifications are subject to change without notice.

CONNECTORS DESCRIPTION:

INPUT

PSU side: MFG: TE connectivity (Tyco); PN: 2141272-1 (HVA630 KEY A) Mating: MFG: TE connectivity (Tyco); PN: 2177140-x (detail according "part list" table; KEY A, DWG: C-2177140)

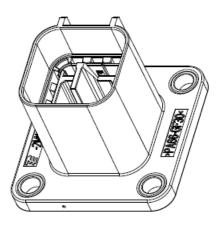

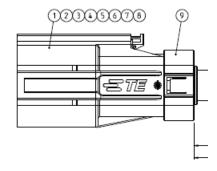

Terminal 1 : +Vin – positive pole of input voltage Terminal 2 : - Vin – negative pole of input voltage

HVIL pins shorted internally

Date: 12-Jan-2015 Page 1 of 3 Drawing No. BCM.00316



Installation Instructions 700DNC40-24-XG 4kW DC/DC Converter


SIGNAL (CTRL)

Connector pin NO.	Signal
1	PS_WAKEUP
2	ADR0
3	ADR1
4	CAN_SPEDD
5	CAN_H
6	CAN_L
7	+ SENSE
8	- SENSE

Signal mating part: TYCO 776286-1

OUTPUT

Positive output: +Vo busbar Negative output: - Vo busbar

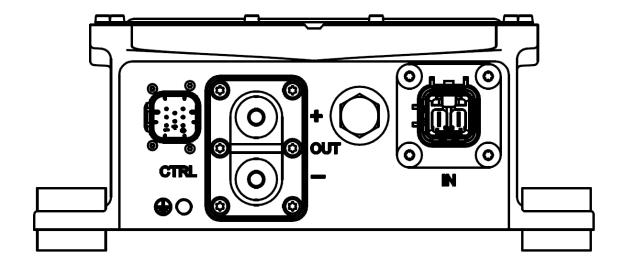


Date: 12-Jan-2015 Page 2 of 3 Drawing No. BCM.00316



Installation Instructions 700DNC40-24-XG 4kW DC/DC Converter

CONNECTION EXAMPLE:

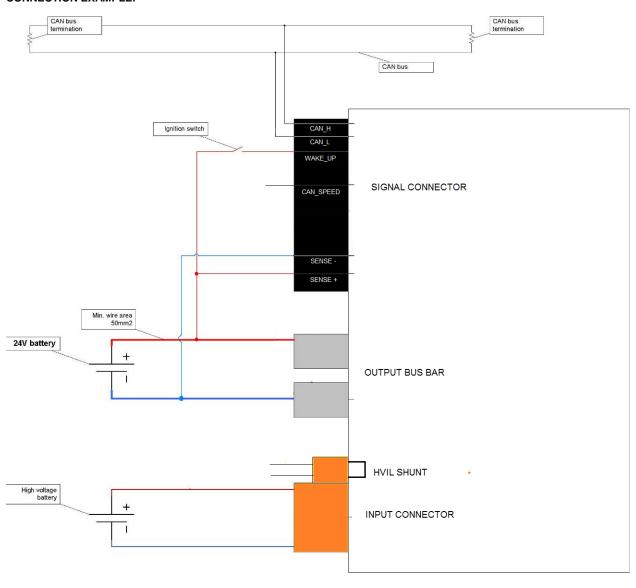

Date: 12-Jan-2015 Page 3 of 3 Drawing No. BCM.00316